



ADDITIONAL ANCHORS SHOULD BE PROVIDED AROUND THE PERIMETER

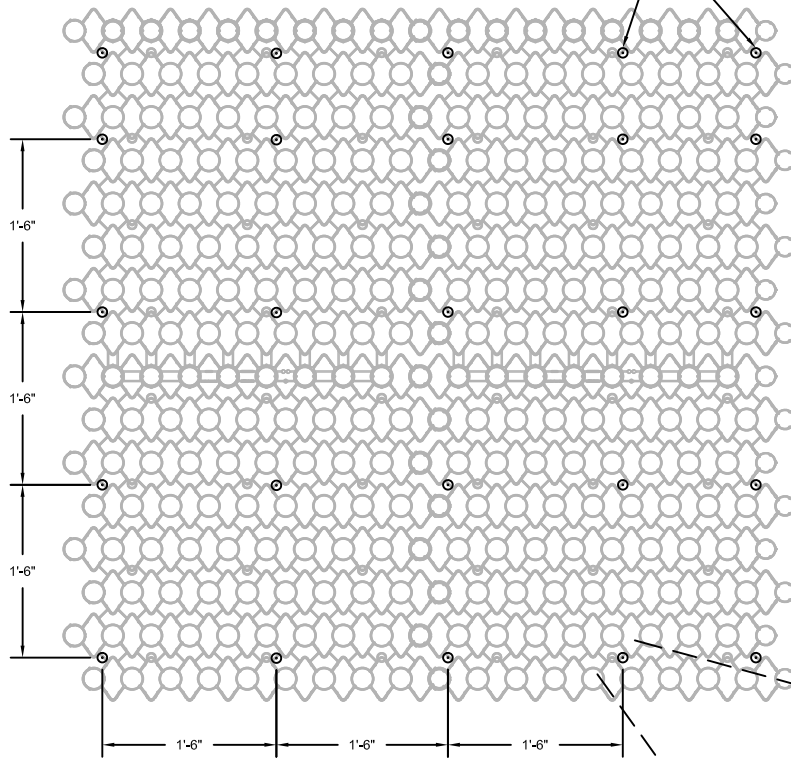

**ANCHORING INSTRUCTIONS:**

1. INSTALL AN ANCHOR OVER THE FIRST CROSS BEAN OF THE ROW
2. SPACE FOLLOWING ANCHORS AT 18" ON CENTER
3. FINISH WITH ANCHOR ROW ALONG PERIMETER

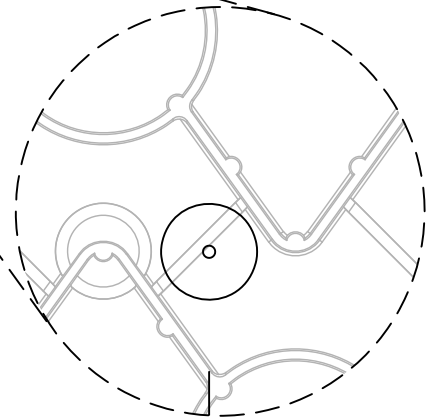

**NOTES:**  
a. REFERENCE CURRENT INSTALLATION INSTRUCTIONS FOR PROPER ASSEMBLY AND INSTALLATION PRACTICES.

REV.	DATE	RECORD OF CHANGES	BY	APPRV.
A	3/26/19	INITIAL RELEASE	JKB	JKB

**StormTank**  
A Brand of Brentwood Industries, Inc.  
500 Spring Ridge Drive  
Reading, PA 19610  
Phone: (610) 374-5109  
www.StormTank.com  
Info@StormTank.com

Project Name		ANCHOR PATTERN DETAIL	
Title			
 <b>GROUNDPRO</b>			
Drawn By		Date	
J.BAILEY		3/26/19	
Drawing No.		Sheet	Scale
STPP-004-00		1 of 1	NTS

This is the property of Brentwood Industries, Inc. It may not be reproduced or used for any purpose other than those expressly authorized by Brentwood Industries. It shall be returned immediately upon request of Brentwood Industries.